# **OXF-HOOK-S-PC: Robe Hook**

Material: Zinc Alloy | Finish: Polished Chrome








**Product Dimensions** (All dimensions are in millimeters unless otherwise indicated)

We reserve the right to amend where necessary and without any prior notice.

Base Diameter : 51 | Base Height : 9 | Projection : 47 | Tube Diameter : 16









## Supplied as:

- Robe Hook (One Piece)
- All fixing screws and fasteners

### **Available Finishes**









Polished Chrome

Antique Bronze

Matt Black

Satin Brass

## **Products in the Set**













**Towel Rail 45cms** OXF-TOWEL-45-PC

**Towel Rail 60cms** OXF-TOWEL-60-PC


**Toilet Roll Holder** OXF-PAPER-PC

**Towel Ring** OXF-RING-PC

**Tumbler Holder** OXF-TUMBLER-PC


Soap Dispenser OXF-SOAP-PC

#### **Installation Instructions**

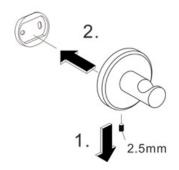


1.

Loosen the set screw on the accessory and remove the backing plate. Position the accessory against the wall and mark outline with pencil.



2

Position the backing plate flat side down on the wall and mark holes with pencil.

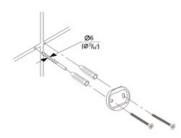

3.

Mount to drywall


Predrill holes on the wall to fit wall anchors.

(15/64" Drill bit recommened).

Insert wall anchors into the wall.

Position backing plate flat side down over the anchors and install screws. Mount to wood  $\,$ 

If installing on wood surface, use wood screws. (No anchors required).

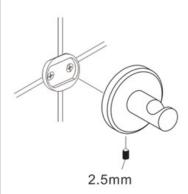

4.

Slide the accessory onto the backing plate and tighten the set screw using Allen Key provided.

+44 (0)1384 457 900 www.m-marcus.com info@m-marcus.com