


INTERIOR INTERFLAP

①

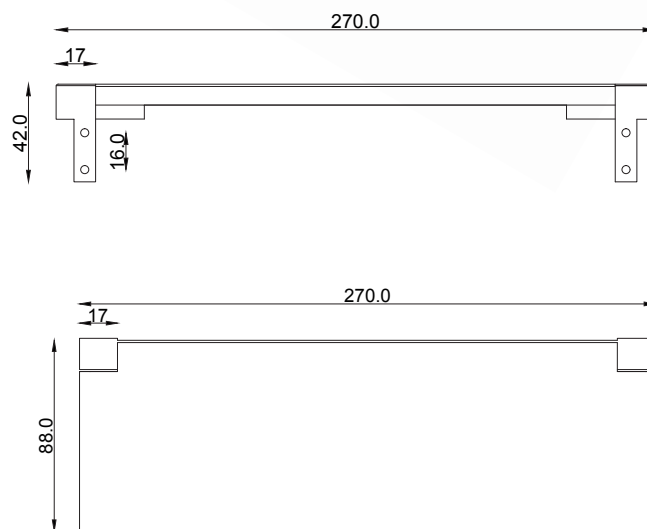

②



No. 6 x 25mm Steel starter screw x 1pc.
Drill pilot holes, use the starter screw to cut a thread

③



No. 6 x 19mm Black-Nickel Plated
Stainless Steel (SS) wood screw x 4pcs.
Fasten the SS screw into the pilot hole

①

1 x Interior Letterflap
piece

②

1x Steel pilot wood screw with
each piece

③

4x SS wood screws with each
piece

**Box
Contains**



M Marcus Ltd., Dudley

Material	Date	Product Code	Description	Sizes shown are in mm and approximate. We reserve the right to amend where necessary and without any prior notice.
Malleable Iron	6 September 2018	FB 862 270	Interior interflap	